

I n k j e t W a t e r - S l i d e D e c a l P a p e r

This paper can be used to make water slide decals

Create your very own water slide decals, using your inkjet printer with our inkjet water-slide decal paper. Turn your very own custom designs into decals, using this very easy to use inkjet decal paper. These decals may be applied onto almost any smooth, non-porous surface.

Glass, metal, ceramic ware (for decorative purposes), wood, furniture, candles, soap, model airplanes, model railroads, die-cast cars, fishing rods, picture frames, book covers, albums and appliances are just some examples of where inkjet water-slide decals may be applied.

These decorative non-fire inkjet water-slide decals make arts and crafts projects fun and easy.

Your imagination is your only limit, when you use our inkjet water-slide decal paper.

Printing and Application Instructions For Inkjet Printers

Step #1: Design your decals using any graphic software program. (Use 8 1/2 " x 11" sheet INK JET Decal Paper or cut sheet into half if desired.)

Step #2: Set your printer as follows: Resolution = Best

Paper = Photo Gloss (glossy "film" setting in your printer driver.

(Print your decal on the glossy side of INK JET Decal Paper.)

Step #3: Spray your printed sheet evenly with Krylon Acrylic Crystal Clear High Gloss spray until the sheet has a shine (2-3 coats). Allow 30 to 60 minutes to dry and set. (This product is available at any craft or hardware store such as Loews, Home Depot, Ace Hardware, Walmart, etc. Any acrylic clear coat spray will work.) Apply the fixative to the whole page, do not cut out individual decals and apply fixative As the edges of the paper will absorb the fixative making it impossible to slide the decal off paper.

Step #4: When the clear fixative (or spray is dry) Cut out each individual decal image using a standard pair of sharp household scissors.

Step #5: Place decal (dip in warm water ,not hot) into a cup of clean water for 45-60 seconds and remove when the thin decal film begins to roll up and if so it will then straighten out again. When the film starts to loosen from the paper. (Discard backing material after the decal has been removed) Do not leave the paper for a long time (over one minute) in the water.

Step #6: Apply decal to clean surface; ceramic, glass, metal, plastic, soap, candles, mylar balloons, model trains, planes, cars, etc. Work out air bubbles with decal squeegee and let dry. It is important to remove all water and air.

NOTE: You can speed up drying time by placing your decorated object under /near a fan. If you wish to protect your decorated item from surface scratches ,moisture ,or fading, then spray your dried decorated surface with acrylic varnish spray.

Disclaimer: We have tested our media in various personal inkjet printers with good results. The user of this paper/film must determine the suitability of this product before beginning production, using his equipment and method of application. The sellers and manufacturers maximum obligation shall be to replace paper/film that has been found defective .Neither the manufacturer nor the seller shall be held liable for any injury ,direct or consequential, arising out of the use of ,or inability to use this paper/film.

You can see on: www.Youtube.com (many instructional videos under) inkjet waterslide decal .

www.world-paper.com

phone 1 561 2007616